



EFG Active desk reset

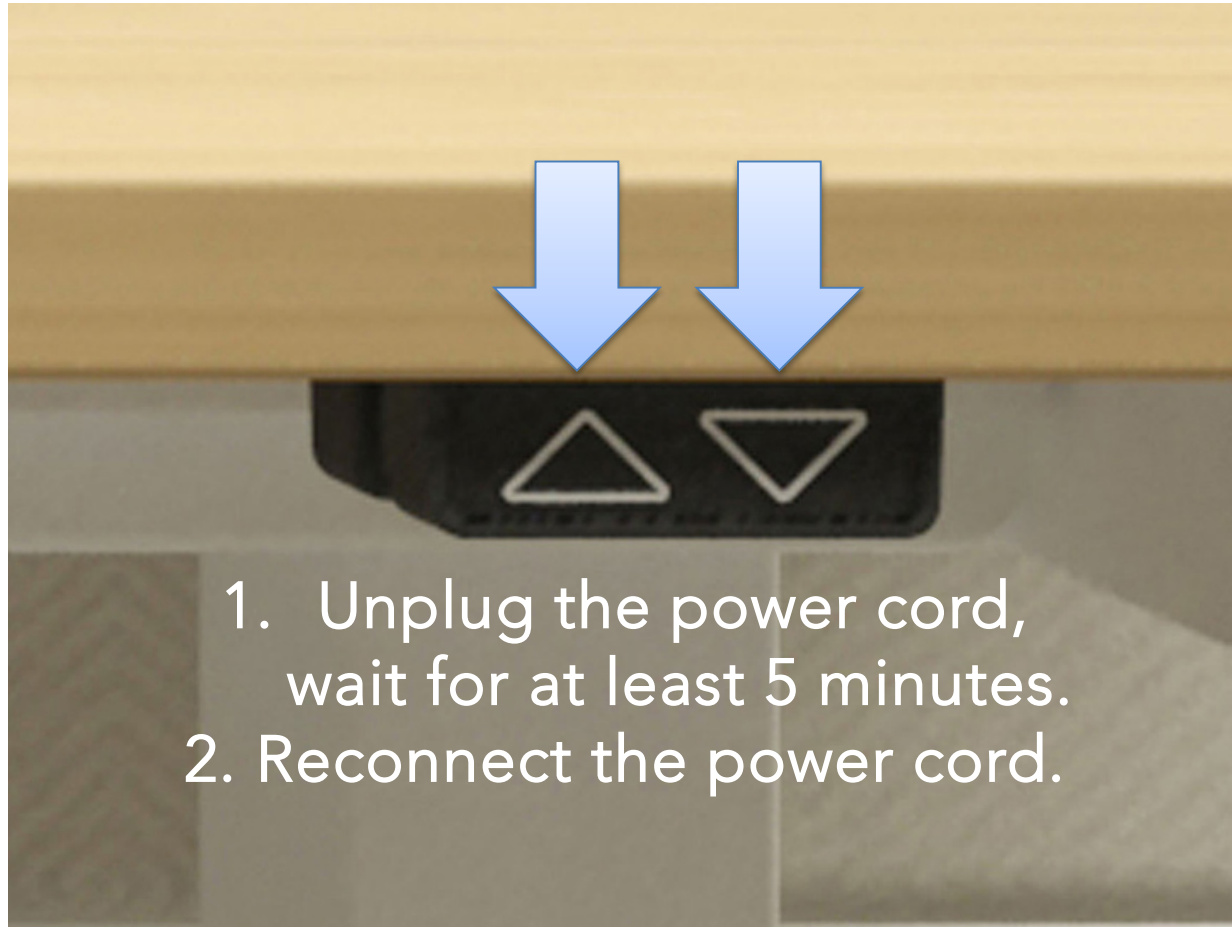


1. Unplug the power cord, wait for at least 5 minutes.
2. Reconnect the power cord.

EFG Active desk reset

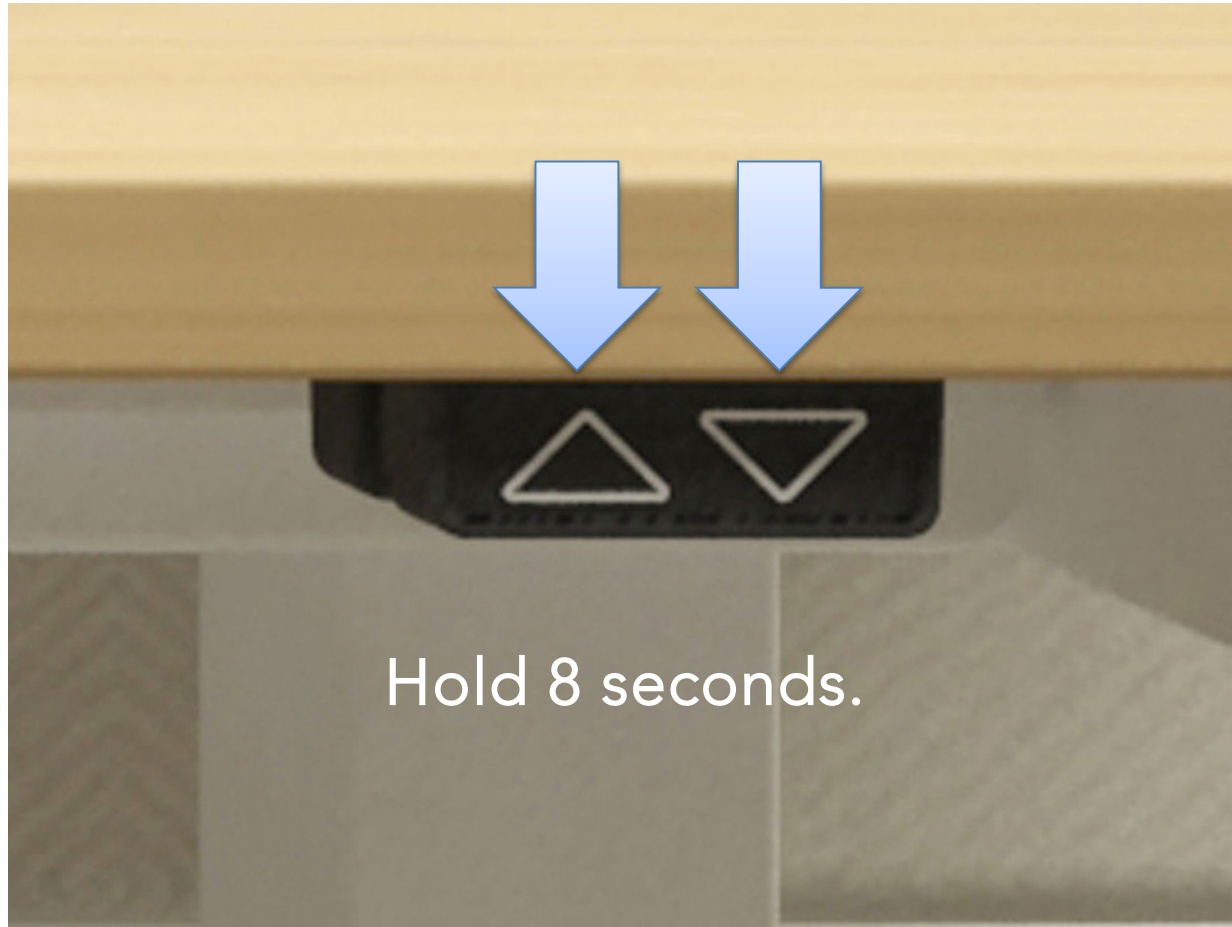

EFG Active desk reset

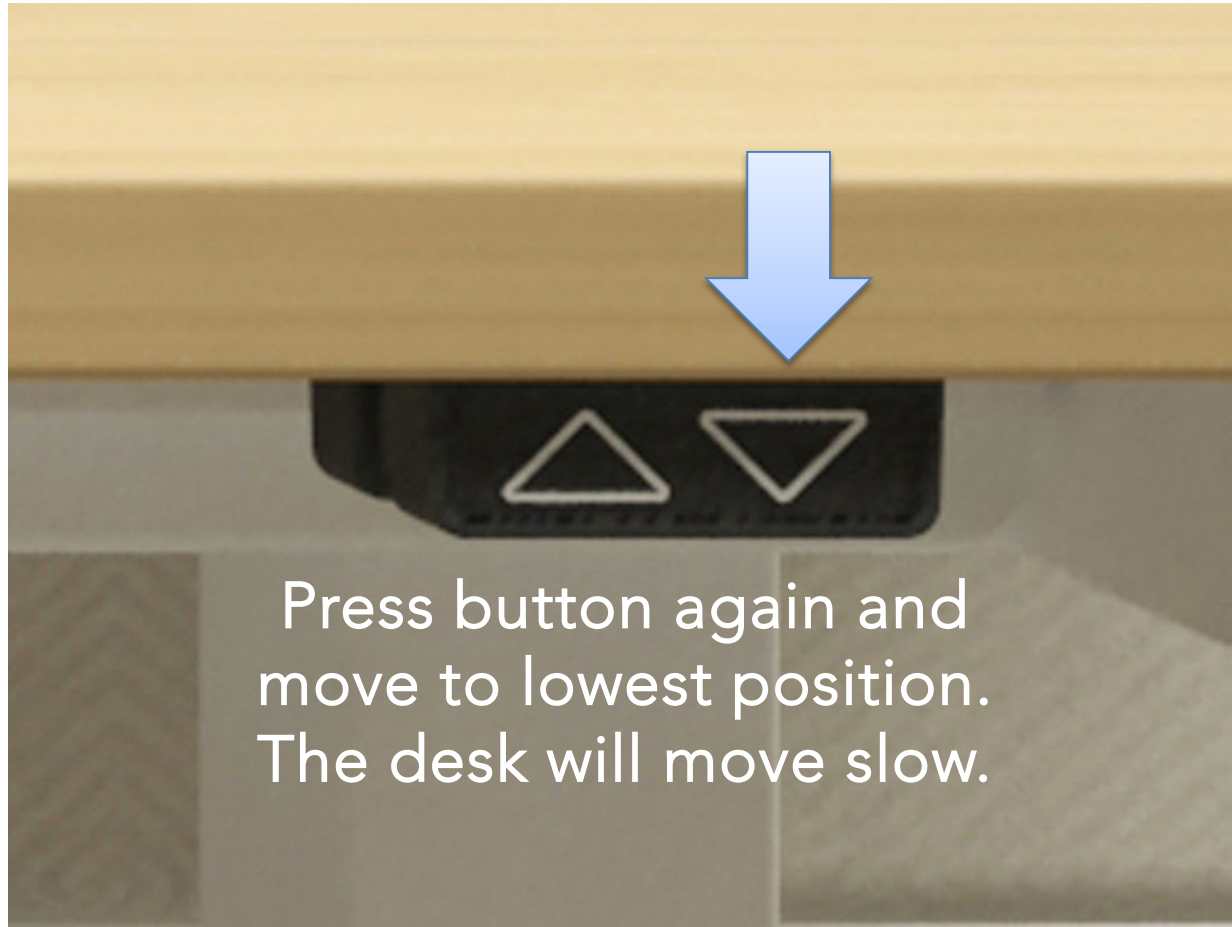

Press button again and
move to lowest position.
The desk will move slow.

EFG Active desk reset

