

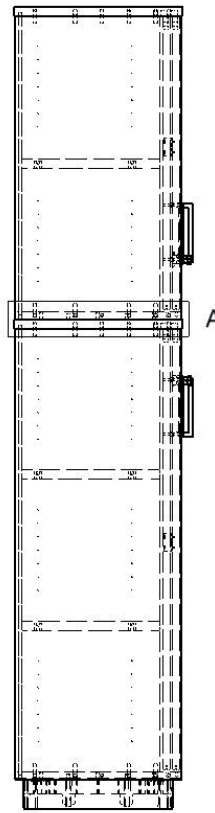



For more information,
please visit www.efg.info

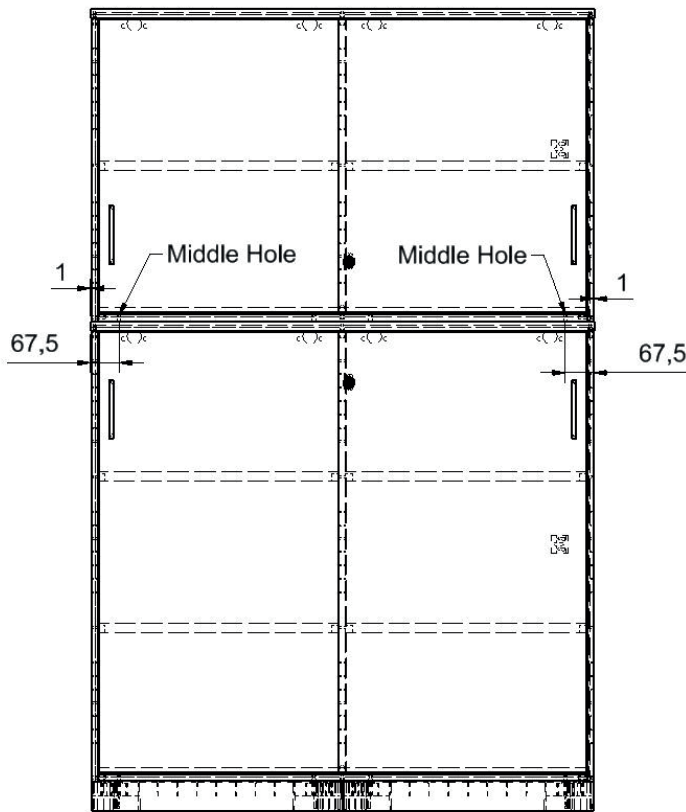

A (1 : 4)

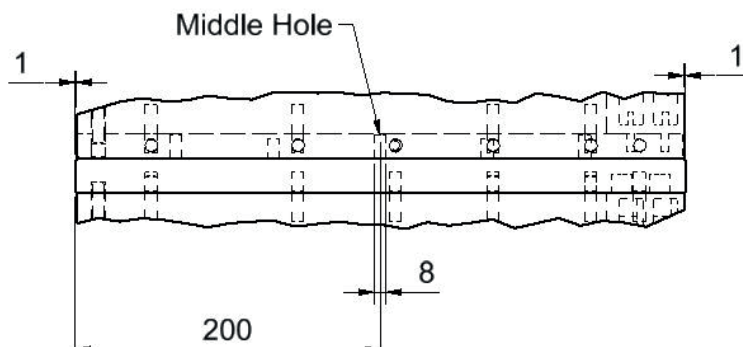

Place the Add-on cabinet on top of the other Cabinet according to the drawing. Use the middle hole in the bottom of the Add-on cabinet as a template and drill with a 8 mm drill through the top of the lower cabinet. Connect the two cabinets using the nuts and screws included in 790380 "Set of Connection Fittings". The screw through the bottom of the Add-on cabinet and the nut under the top of the lower.

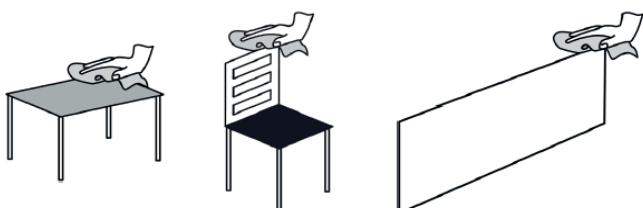

The product contains one or more of following materials:
Wood, metal, plastic.